

# Instructions

## Contents

1. Aluminum End Caps
2. Self-Tapping Screws

## Installation Instructions

1. The End Cap(s) can be installed in either of 2 ways: with adhesive or with screws
2. To install using adhesive: apply liquid adhesive to the back side of the End Cap and press it to the SlatWall. Repeat for each End Cap
3. To install using screws: use a power drill, install self-tapping screw through the End Cap and into the SlatWall.
  - > to start self-tapping screw, apply pressure to power drill
  - > once self-tapping screw starts threading itself, use light pressure and do not over tighten which will cause the threads to strip
  - > for best results, use a ruler and mark the position of where each screw will go for a consistent appearance
  - > if having trouble with self-tapping screw walking, use a center punch and indent the End Cap first before installing self-tapping screw
  - > Repeat for each End Cap

SlatWall MX™ End Cap Kit  
P/N: HSL.EC

Any questions or problems, please contact us:

 
Gupta Permold Corporation  
Consumer Goods Division  
diamondLife™ Brand  
234 Lott Road  
Pittsburgh, PA 15235  
USA  
Ph. 412.793.3511 x103  
Fx. 412.793.1055  
Email: [help@diamondlifegear.com](mailto:help@diamondlifegear.com)  
Store: [diamondlifegear.com](http://diamondlifegear.com)



### Helpful Hint!

Remove protective plastic film from End Caps before installation

### Continuous End Cap (shown installed with adhesive)

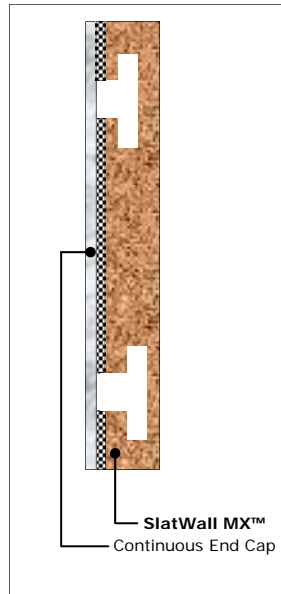

### CAUTION!

Use gloves and eye protection when using power tools

 


Find hundreds of more great work space enhancement products at [www.diamondlifegear.com](http://www.diamondlifegear.com)

Doing a common thing uncommonly well, brings success.

Welcome to the diamondLife.™

### Segmented End Caps (shown installed with screws)

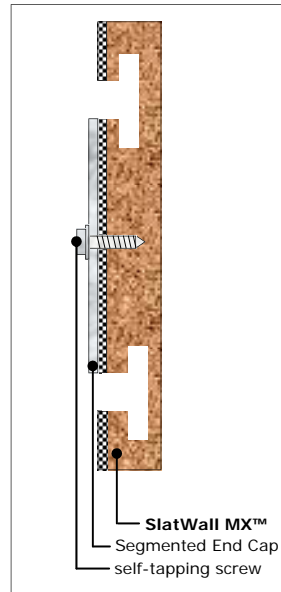

### Other SlatWall Accessories



Peg Hooks



Baskets



Bins



Organizers



Mounting Fasteners