



Understanding SlatWall EMX® Load Capacity

In Between Mounting Points

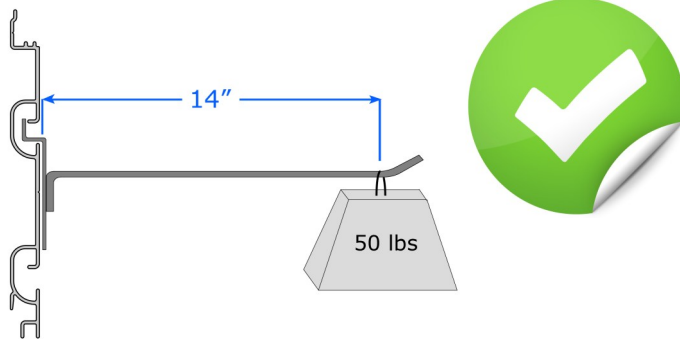


In between mounting points, SlatWall EMX® can hold a 50 lbs point load hanging at a 14" distance from the slatwall face:

- At maximum loading, adjacent load points within the same groove must be spaced 16" apart minimum

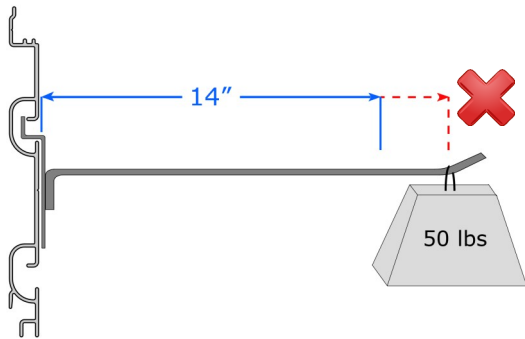


If the 50 lbs load moves further away than 14" from the slatwall face, the slatwall could break

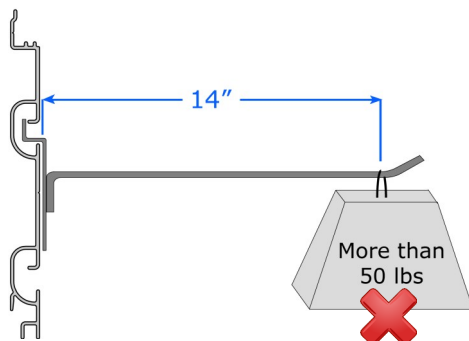


If the load increases to more than 50 lbs, the slatwall could break

On a Mounting Point

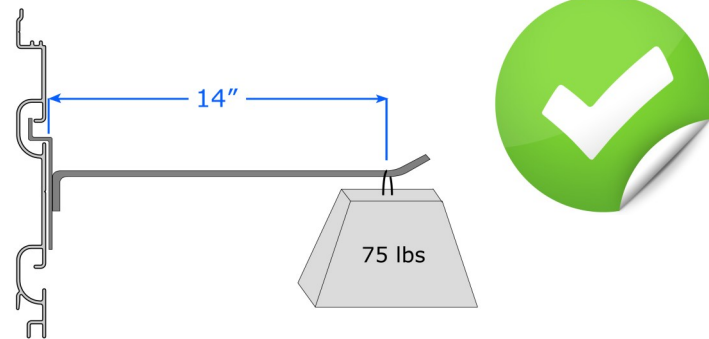


On a mounting point, SlatWall EMX® can hold a 75 lbs point load hanging at a 14" distance from the slatwall face:

- At maximum loading, adjacent load points within the same groove must be spaced 16" apart minimum

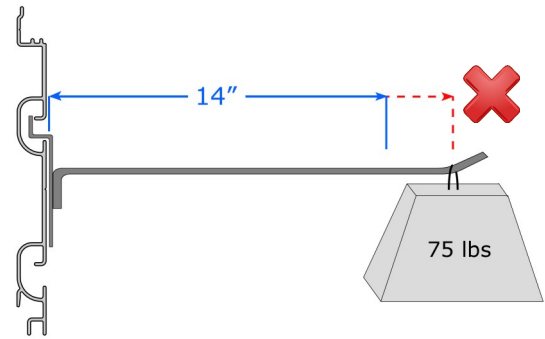

If the 75 lbs load moves further away than 14" from the slatwall face, the slatwall could break

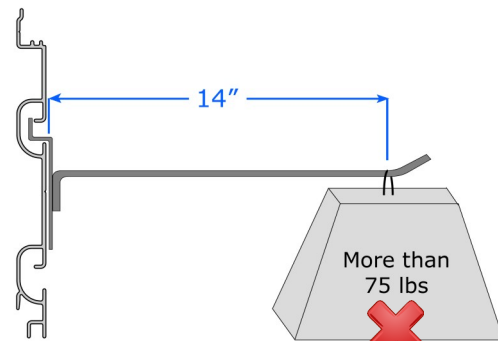

If the load increases to more than 75 lbs, the slatwall could break