

Instructions

Contents

1. Aluminum End Caps
2. Self-Tapping Screws

SlatWall MX® End Cap Kit
P/N: HSL.EC

Installation Instructions

1. The End Cap(s) can be installed in either of 2 ways: with adhesive or with screws.
2. To install using adhesive: apply liquid adhesive to the back side of the End Cap and press it to the SlatWall. Repeat for each End Cap.
3. To install using screws: use a power drill, install self-tapping screw through the End Cap and into the SlatWall.
 - > to start self-tapping screw, apply pressure to power drill
 - > once self-tapping screw starts threading itself, use light pressure and do not over tighten which will cause the threads to strip
 - > for best results, use a ruler and mark the position of where each screw will go for a consistent appearance
 - > if having trouble with self-tapping screw walking, use a center punch and indent the End Cap first before installing self-tapping screw
 - > Repeat for each End Cap

 
Any questions or problems, please contact us:

DiamondLife
234 Lott Road
Pittsburgh, PA 15235
USA
Ph. 1.888.98.DGEAR (983.4327)
Email. help@diamondlifegear.com
Store. diamondlifegear.com

Doing a common thing uncommonly well,
brings success.

Welcome to the DiamondLife.

Continuous End Cap (shown installed with adhesive)

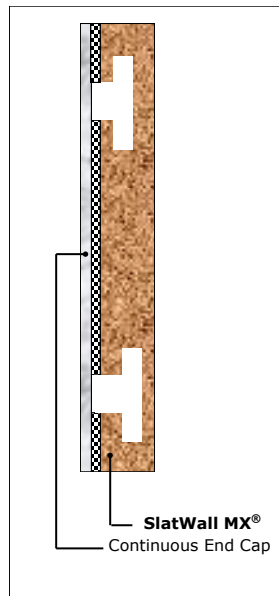

CAUTION!

Use gloves and eye protection when using power tools



Find hundreds of more great work space enhancement products at www.diamondlifegear.com



Helpful Hint!

Remove protective plastic film from End Caps before installation

Other SlatWall Accessories



Peg Hooks



Baskets



Bins

 


Organizers



Mounting Fasteners

Segmented End Caps (shown installed with screws)

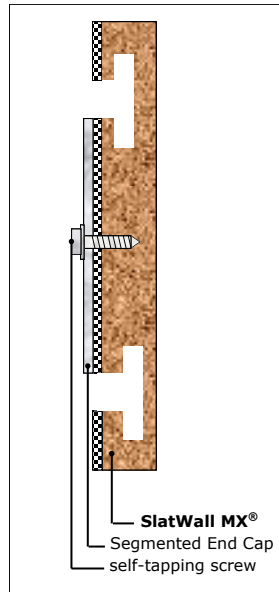

DIAMONDLIFE