

Instructions

Contents

1. 1 unit Chrome Grid
 2. 1 unit Back Plate (diamond aluminum or brushed aluminum)
 3. 6 units GridWall MX™ Clamps
- * Power drill and hook not included



diamond aluminum

Installation Instructions

1. Depending on the wall type being mounted to, holes may need to be pre-drilled into the wall—use the Back Plate as a template and mark the 6 hole positions onto wall accordingly
2. Use as many wall studs as possible
3. Lay Back Plate on flat work surface. Lay Chrome Grid on top of Back Plate. Attach 6 clamps onto Chrome Grid to line up with 6 mounting holes in Back Plate.
4. The Chrome Grid has a dual row of wire around it's periphery. The clamps attach to the wire on top. Position the clamps so they line up with the holes in the Back Plate. Squeeze the clamps so they grip the Chrome Grid.
5. Fasten this system onto wall using proper size fastener. An additional person may be required to hold the GridWall MX™ system to the wall while the fasteners are being installed.

GridWall MX™
P/N: HGW2448

Any questions or problems, please contact us:

Gupta Permold Corporation
Consumer Goods Division
diamondLife™ Brand
234 Lott Road
Pittsburgh, PA 15235
USA
Ph. 412.793.3511 x103
Fx. 412.793.1055
Email. help@diamondlifegear.com
Store. diamondlifegear.com



Find more great Garage Gear at
www.diamondlifegear.com

Doing a common thing uncommonly well,
brings success.


Welcome to the diamondLife.™



Helpful Hint!

Remove protective plastic film from
metal fascia after installation.

Fastening into wall stud

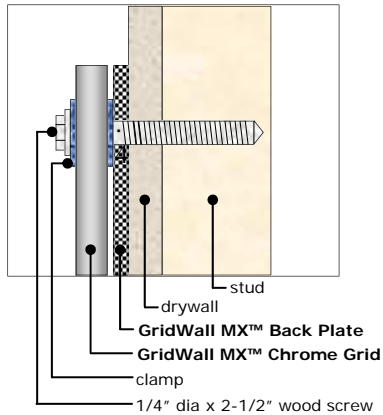

Fastening into hollow wall

