

# Instructions

## Tile Detail



## Installation Instructions


1. Site condition MaxTile™ by allowing it to come to room temperature (72°F) for a period of 24 hours prior to installation.
2. MaxTile™ can be cut to size or shape by using a saw. For best cutting results, use saw blades designed to cut 1/16" thick metal (also known as "sheet metal").
3. IMPORTANT—Start laying tile at any one corner of the space to be covered.
4. Set the first MaxTile™ tile (marked #1 below).
5. Refer to the tile adhesive mfr's instructions for correctly applying it.
6. For easiest tile positioning, make contact with one corner of the tile first and then let the entire tile make contact.
7. Add the second tile next (marked #2 below)
8. Keep adding tiles to the first row in this manner
9. When the first row is complete, start the second row

diamondLife recommends using the following adhesives:

- For WALLS:  
Liquid Nails® Polyurethane Construction Adhesive. Available nationwide at The Home Depot® and other hardware stores.



- For FLOORS:  
OmniGrip® Maximum Strength Tile Adhesive or similar. Available nationwide at The Home Depot® and Tile Distributors®.

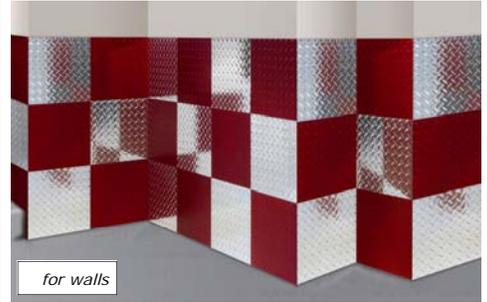

**MAXTILE™**

Part Number: HMTX series

Any questions or problems, please contact us:

Gupta Permold Corporation  
Consumer Goods Division  
diamondLife™ Brand  
234 Lott Road  
Pittsburgh, PA 15235  
USA  
Ph. 412.793.3511 x103  
Fx. 412.793.1055  
Email. [help@diamondlifegear.com](mailto:help@diamondlifegear.com)  
Store. [diamondlifegear.com](http://diamondlifegear.com)



Find hundreds of more great work space enhancement products at [www.diamondlifegear.com](http://www.diamondlifegear.com)




### Helpful Hint!

Tilt the tile you are attaching so that only a corner makes contact first, so you can fine tune the position of the tile—then lay the entire tile down



### Helpful Hint!

Remove the protective plastic film from the tiles after installation

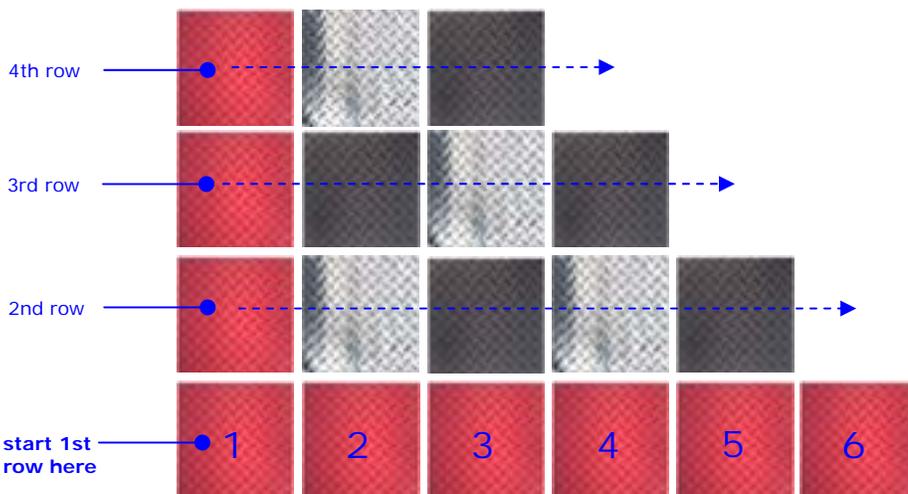

continue on and finish first row!

 **diamondLife™**