

Instructions


Contents

1. PegBoard X1™ OverLay
2. Snap-Rivet





Installation Instructions

1. Fasten onto existing peg board using peg hook holes for mounting
- 2. Position Snap-Rivets every 16" to 24" on center
3. Press Snap-Rivet thru PegBoard X1™ OverLay and thru existing peg board until it snaps into place.
4. To remove Snap-Rivet:
 - from back side of peg board, apply pressure to center pin until lock releases OR
 - From front side of pegboard, use flat head screw driver, pry head away from surface

to install:

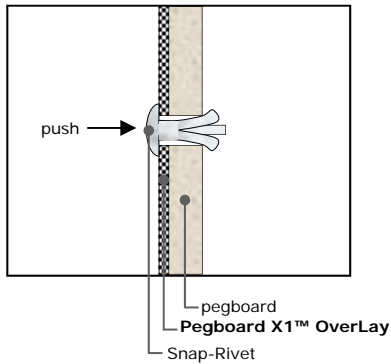

to remove:

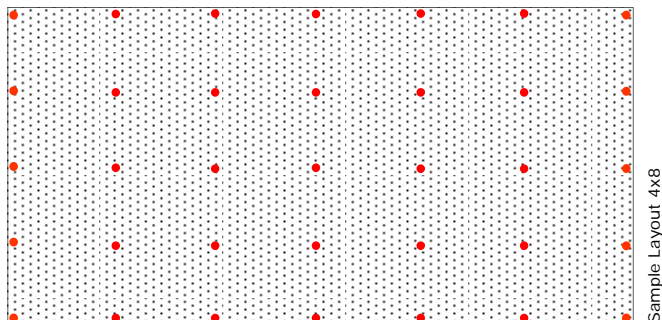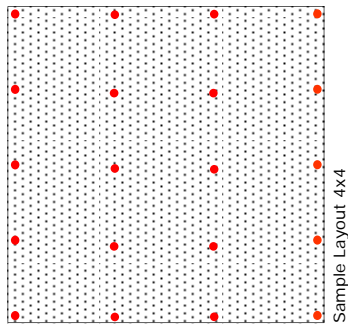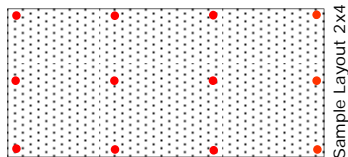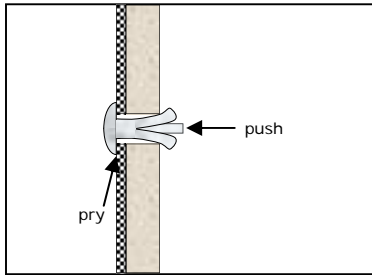

PegBoard X1™ OverLay
P/N: HPBO.X

Any questions or problems, please contact us:

Gupta Permold Corporation
Consumer Goods Division
diamondLife™ Brand
234 Lott Road
Pittsburgh, PA 15235
USA
Ph. 412.793.3511 x103
Fx. 412.793.1055
Email. help@diamondlifegear.com
Store. diamondlifegear.com



Find more great gear at
www.diamondlifegear.com

Doing a common thing uncommonly well,
brings success.

Welcome to the diamondLife.™



Helpful Hint!

Remove protective plastic film
before installation