

## Basic SlatWall PX™ Drywall Installation Instruction Sheet

**NOTE: Observe all safety precautions and wear all safety equipment before proceeding!**

1. The easiest way to install SlatWall PX™ is from the floor up. Start by locating the wood studs and proceed to install the first section of SlatWall PX™. Be sure to level the SlatWall PX™ before screwing them into the wooden studs.

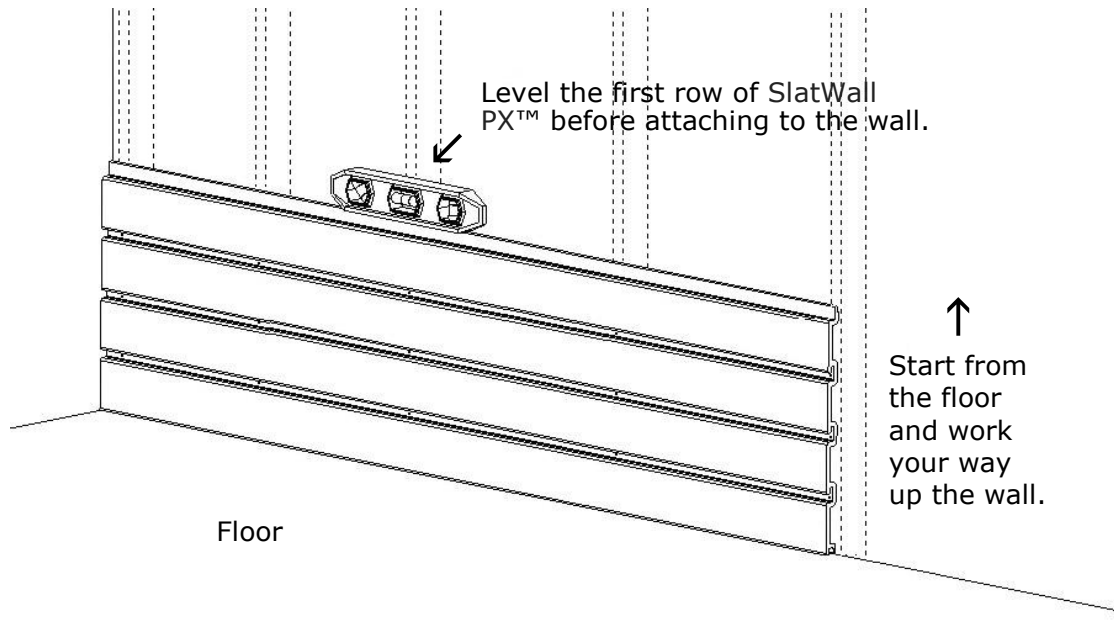


Figure 1. Level SlatWall PX™ before attaching it to the wall

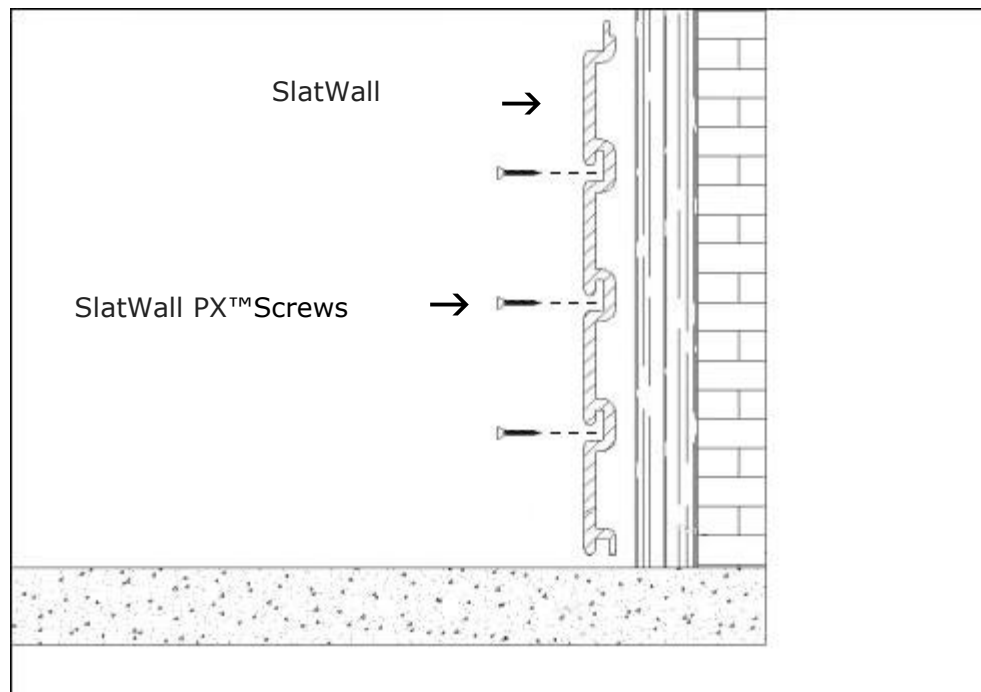


Figure 2. SlatWall PX™ installation.

2. Proceed to install the next SlatWall PX™ on top of the first leveled row. SlatWall PX™ can be cut horizontally or vertically to accommodate room dimensions. Preferably using an electric saw with a thin sharp blade for SlatWall PX™ cutting.