

Instructions



Genuine Diamond Plate
P/N: SH

Cutting Instructions

1. For best cutting results, use saw blades designed to cut sheet metal 1/16"tk. A jig saw, rotary saw, or band saw can be used.
2. Drill holes using drill bits designed to cut aluminum. For best results, mark hole locations with a punch to avoid drill walk.
3. Always wear proper eye, body, and hand protection when working with metal sheet.

Any questions or problems, please contact us:

DiamondLife
234 Lott Road
Pittsburgh, PA 15235
USA
Ph. 1.888.98.DGEAR (983.4327)
Email. help@diamondlifegear.com
Store. diamondlifegear.com




Helpful Hint!

Remove protective plastic film
before installation

Care Instructions

1. Store in a cool and safe place.
2. Before contacting the metal with any substance including cleaning substances, test a small patch first. Check test patch after 24 hrs for any adverse reaction to metal finish.
3. Metal is shipped with a protective plastic film to protect from damage during transit. Remove protective plastic film after transit.

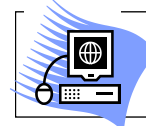

Find hundreds of more great
work space enhancement products
at www.diamondlifegear.com

Doing a common thing uncommonly well,
brings success.

Welcome to the DiamondLife.

Wall Mounting Instructions

1. Option 1: install using a construction adhesive, such as Liquid Nails™, PL Brand, etc
2. Option 2: install using fasteners. Requires drilling holes. Use a drill bit designed to cut aluminum.

CAUTION!



Use care when handling metal edges as they can be sharp to the touch. It is recommended to wear work gloves during handling. Heavier metal pieces can shift unexpectedly during handling and cause cuts.

DIAMONDLIFE III