

ToolCart MX™ Assembly Instructions



Box Contents

Image	Description	4x6	2x6	Image	Description	4x6	2x6
	Shelf (top & bottom)	2	2		Screw 1/4-20 x 2"	3	3
	PegBoard Panels	2	2		Acorn Nut 1/4-20	23	15
	Caster	2	2		Shelf Screw 1/4-20 x 1"	20	12
	Lockable Caster	2	2		Spacer and Gluedots	26	18



Tools Needed
Phillips Screwdriver
7/16" Wrench
3/4" Wrench

ToolCart MX™
P/N: HPBTC.XXXX.X

Any questions or problems, please contact us:

Gupta Permold Corporation
Consumer Goods Division
diamondLife™ Brand
234 Lott Road
Pittsburgh, PA 15235
USA
Ph. 412.793.3511 x103
Fx. 412.793.1055
Email. help@diamondlifegear.com
Store. diamondlifegear.com

Assembly:



1. Adhere GlueDots to spacers.



2. Place 1" screws through the pre-punched holes located on the center and bottom shelves. Attach the spacers with GlueDots to the outside of the shelves.

Helpful Hint!

Remove excess glue from the screw thread. This will allow the acorn nuts to be easily tightened.

ToolCart MX™ Assembly Instructions

Assembly Continued



3. Attach the pegboard to the larger, bottom shelf. Line the shelf up with the bottom row of holes on the pegboard. Secure the pegboard to the shelf using acorn nuts. Acorn nuts should be on the outside of the pegboard.



4. Repeat step 3 — Attach the second pegboard to the opposite side of the shelf.

ToolCart MX™ Assembly Instructions

Assembly Continued



5. Using the Gludots, attach two of the 3/4" spacers together. Place one 2" screw through the center hole at the top of one pegboard panel. Repeat this step and add spacers to first and last peg hole on the top row.



6. Next, place the double spacer over the screw and bring both pegboards together. The 2" screw should go through the center hole of the pegboard on the opposite side. Secure the pegboards together using an acorn nut.

Helpful Hint!


Do not tighten the acorn nuts. This will make installing the center shelf easier.

ToolCart MX™ Assembly Instructions

Assembly Continued



7. Count down from the top of the pegboard unit, 28 holes, for the location of the center shelf.

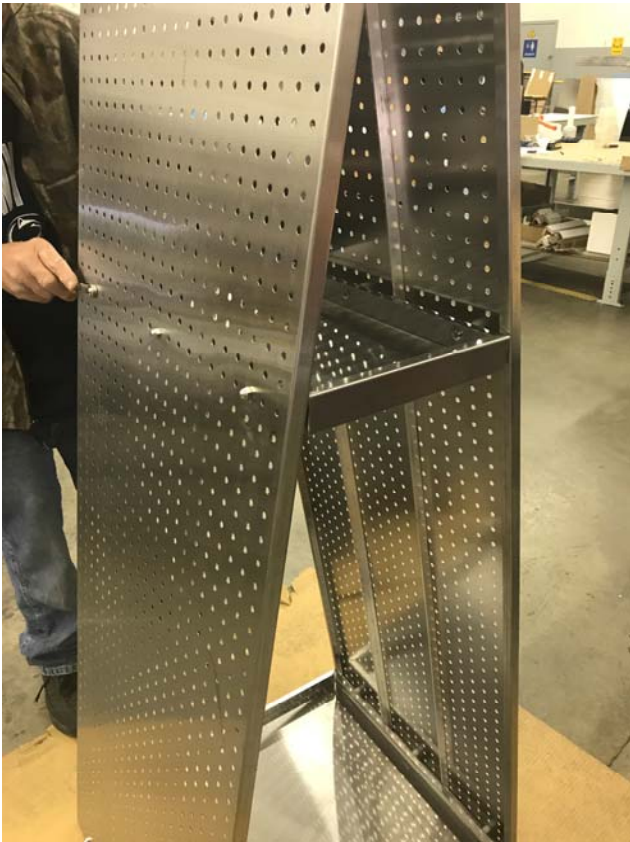

8. Secure the center shelf to the pegboard using acorn nuts.

ToolCart MX™ Assembly Instructions

Assembly Continued



9. Attach casters (wheels).