
Instructions


Contents

- PegBoard HB[™]
- 2. Self-Stick Spacer™:
 - Spacers
 - Adhesive Dots

Installation Instructions

- 1. Fasten onto wall using peg hook holes for mounting
- 2. Locate mounting holes onto structural wall components (ie wall studs) wherever possible.
- 3. Use holes shown in red in illustrations below.
- I use any remaining holes for mounting into structural wall components (ie wall studs) shown in green in illustrations below.
 - 5. Use as many structural wall components (ie wall studs) as possible.
 - 6. Remove clear plastic liner from adhesive dots.
 - 7. Press spacer to adhesive dot, then press spacer to desired location on PegBoard $\mathrm{HB}^{\mathrm{\tiny TM}}$
 - 8. Do not over tighten screws.

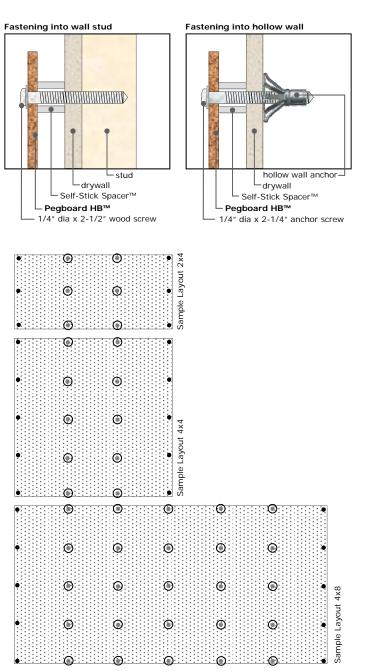

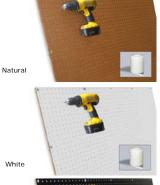



PegBoard HB[™] P/N: HPBW

Any questions or problems, please contact us:

Black

Gupta Permold Corporation Consumer Goods Division diamondLife™ Brand 234 Lott Road Pittsburgh, PA 15235 USA Ph. 412.793.3511 x103 Fx. 412.793.1055 Email. help@diamondlifegear.com Store. diamondlifegear.com



Find hundreds of more great work space enhancement products at www.diamondlifegear.com

Accessories





Organizers Mounting Faster



diamond**Life**