

# Instructions

## Contents

1. MagBoard®
2. Mounting Screws
3. Screw Caps (optional)
4. Magnets (optional)

## Installation Instructions

1. Fasten onto drywall using screws included. Using a screw driver, install the screw through the pre-drilled mounting holes into your drywall. If you have Screw Caps, put them onto the screws prior to mounting. **You do not need to hit studs nor use wall anchors.**
2. For mounting onto other wall types such as masonry, etc use appropriate fasteners/anchors sold elsewhere.

## Using Dry-Erase & Wet-Erase Markers

- For best results, use EXPO® Brand Vis-A-Vis® Wet-Erase Markers. Although you can use Dry-Erase markers, they can leave ghosting especially on the Bone White color. To remove stubborn marks, use EXPO® Brand White Board Cleaner Spray. There are many other brands of dry-erase and wet-erase markers – and their ease of dry-erase-ability varies, however most erase using the EXPO® Brand White Board Cleaner Spray.
- To remove stubborn marks from your MagBoard®, try the following (listed in order of strength). When trying any chemical, try an inconspicuous area first to make sure the surface of the product is not adversely affected: 1) Hand Sanitizer 2) Rubbing Alcohol 3) Non-Acetone Nail Polish Remover 4) Hydrogen Peroxide 5) Hairspray 6) Vinegar 7) WD-40 Lubricant

## Helpful Hints

- Do not over tighten screws.
- For larger panels, the interior area of the panel may have some flex after being mounted to a wall. Double-faced foam tape may be used on the back side of the panel to eliminate this flex.
- **To avoid scratching, do not drag magnets across the board. Instead, lift the magnets off the board and then place them at their new desired position.**

## FAQ

**Q: How can I match the color of the screws with my MagBoard®?**

**A:** We offer matching color Screw Caps, which cover the heads of the screws.

**Q: How do I attach contact paper/fabric/wallpaper/graphic to my MagBoard®?**

**A:** Attaching your own contact paper, fabric, wallpaper or graphic onto your MagBoard® is a great way to customize it's appearance:

1. Use a spray adhesive to attach your material to the MagBoard®. There are many types of spray adhesives, such as 3M brand. Consult your local fabric store, craft store or hardware store for the best spray adhesive recommended for the type of material you are attaching.
2. Try to use the thinnest material you can. The thicker the material, the more the magnetic holding strength will be reduced. Generally speaking most people don't notice much of a magnetic strength reduction with typical thin materials.
3. To mount your finished MagBoard® onto your wall, either poke the mounting screws thru the material and use the existing mounting holes of the MagBoard® OR attach the MagBoard® to the wall using a construction adhesive (like Liquid Nails™ or PL™ brand).



MagBoard®  
P/N: HMB\*

Any questions or problems, please contact us:

diamondLife  
234 Lott Road  
Pittsburgh, PA 15235  
USA  
Ph. 1.888.98.DGEAR (983.4327)  
Email. help@diamondlifegear.com  
Store. diamondlifegear.com



Find hundreds of more great work space enhancement products at [www.diamondlifegear.com](http://www.diamondlifegear.com)

## Helpful Videos

Point camera at QR code



Features




Installation



What's in the Box?

**Mounting:** Please follow the instructions for the mounting method you ordered

### Mounting with Command Strips

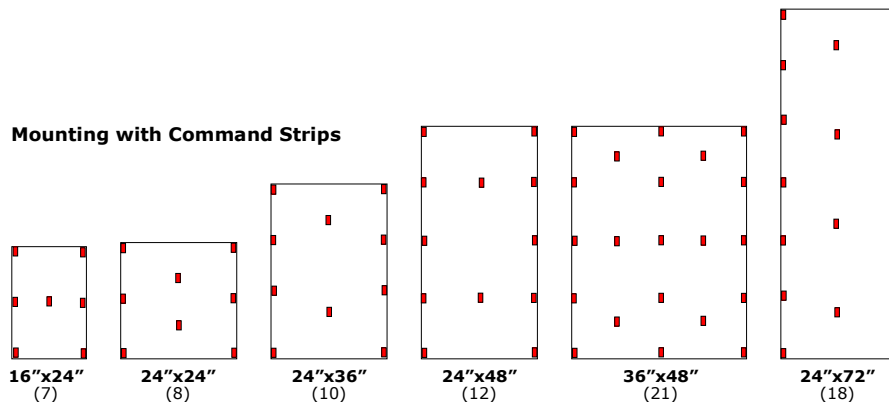

### Fastening into hollow wall with included screws

