


Instructions




Contents

SlatWall EMX™




J-Cap (optional)



Installation Instructions

1. Start at the bottom. If studs are concealed under a substrate, you must first locate and mark stud locations. We recommend attachment every 16" on-center. SlatWall EMX™ can be installed over wood or steel studs.
2. Laser or snap a level reference line at the bottom of your entire slatwall area. Double check to make sure the total number of slatwall pieces will fit your desired slatwall area including J-Cap top & bottom. Place the hidden fastener J-Cap with the bottom aligned to your level line and attach with screws. J-Cap must be straight and level. Do not space screws greater than 16" apart and use **#10 x 2"L pan head screw**. Screws should be centered in small groove on trim. Pre-drill 3/16" diameter holes. Place the first SlatWall EMX™ piece onto the J-Cap making sure it is level and seated as shown in **A2**.
3. Once seated correctly, attach each piece with screws at the top as shown in **B1**. Do not space screws greater than 16" apart. Repeat the procedure with additional pieces, making sure each is seated as shown in **B2** and secured at the top with screws. Continue to the top of your slatwall area until all pieces are installed. Always check level and fit of each piece.
4. At top of the SlatWall EMX™, attach a piece of hidden fastener J-Cap onto the topmost piece. A small amount of adhesive may be used on the top flange to secure the J-Cap in place.

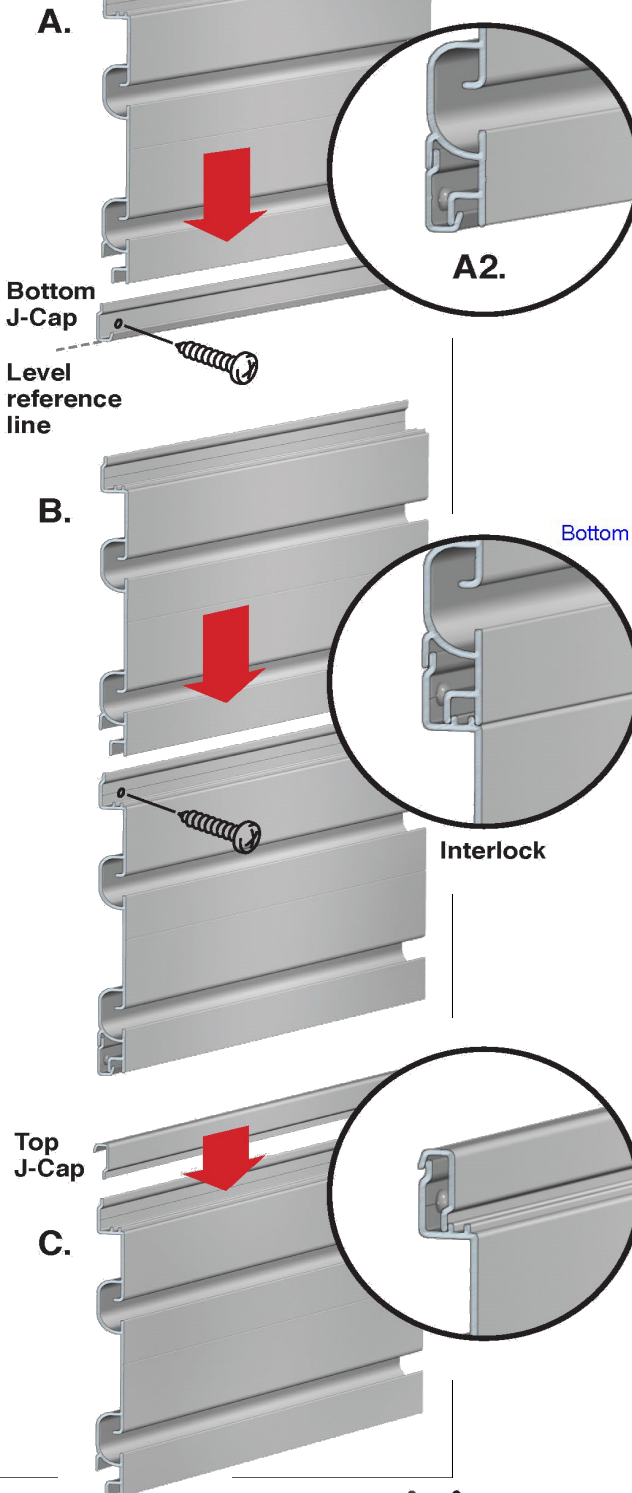

Slatwall Top Trim



Bottom Trim

Helpful Videos

Point camera at QR code



What's in the Box?



Installation



Features

Any questions, please contact us:

diamondLife
234 Lott Road
Pittsburgh, PA 15235
USA
Ph. 1.888.98.DGEAR (983.4327)
Email. help@diamondlifegear.com
Store. diamondlifegear.com