


Instructions

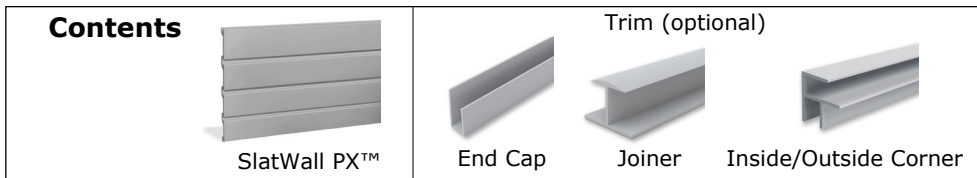

Installation Instructions




1. Start at the bottom. If studs are concealed under a substrate, first locate and mark stud locations. We recommend attachment every 16" horizontally. SlatWall PX™ can be installed over wood or steel studs.
2. Laser or snap a level reference line at the bottom of your entire slatwall area. Double check to make sure the total number of slatwall pieces will fit your desired area including J-Caps.
3. Use #10 x 2-1/2" long pan head screw. Screws should be centered in grooves of the SlatWall PX™. Pre-drill if necessary.
4. Horizontal screw spacing: Do not space screws greater than 16" apart horizontally..
5. Vertical screw spacing: Put screws in every groove for best results, or alternatively in every other groove for lighter loads.
6. Once seated correctly, attach each piece with screws in the grooves. Repeat the procedure with additional slatwall pieces, making sure each piece is seated and secured with screws. If using End Caps, slide them onto the left and right edges as you work your way up. Continue to the top of your slatwall area until all pieces are installed. Always check level and fit of each piece.



Videos

Point camera at QR code

Illustration showing back panel connection lip ↴

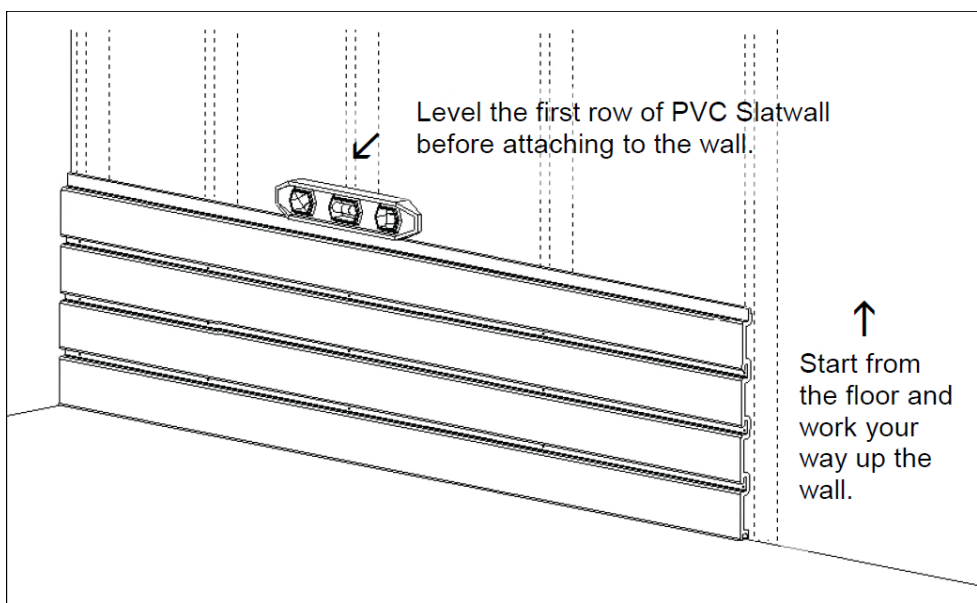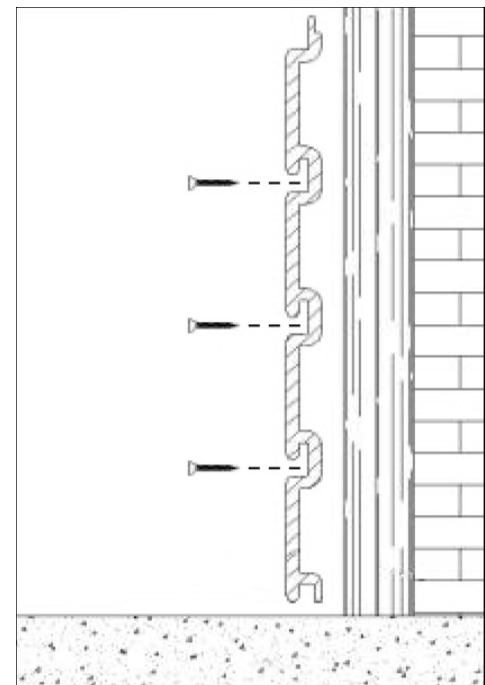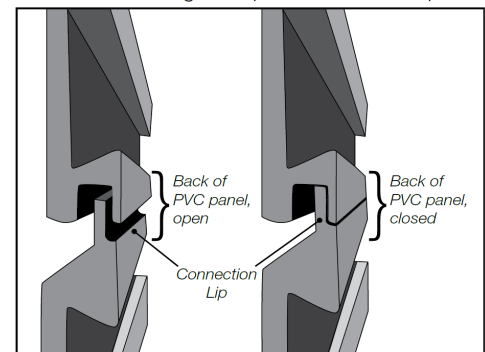

Any questions, please contact us:

diamondLife
234 Lott Road
Pittsburgh, PA 15235
USA

Phone: 1.888.98.DGEAR (983.4327)
Email: help@diamondlifegear.com
Store: diamondlifegear.com